

INSTRUCTIONS: WIRELESS MICROPHONE (THE SHURE PG58)



1. Turn the Power Buttons on for the Microphone, Microphone Receiver and the Amplifier. If you are playing music, turn on the Power to the CD player and/or the Radio controller.
2. Adjust the Master Volume control dial to 5.
3. Adjust Dial #2 to no higher than 5.
4. On the microphone receiver, you will see a number such as A1 or C3. This is your receiver channel. The code on the microphone can be found by unscrewing the base of the microphone. You will see a digital code number flashing. E.g. A1, C3
5. You will need to ensure that the microphone is synced to this channel.
6. To do this, unscrew the bottom cover off the microphone.
7. Ensure the microphone has AA batteries.
8. Ensure microphone has been turned on. There will be a small green LED light showing that the microphone has been powered on.
 - a. There are two buttons labelled 'Group' & 'Channel' near the middle of the microphone.
 - b. Press the 'Group' button repeatedly until you reach the appropriate 'letter' to match the letter on the receiver. Eg. A or C.
 - c. Press the 'Channel' button repeatedly until your number matches the number on the receiver. Eg. 1 or 3.
9. Once you have matched up the codes, check the volume on the amplifier and conduct a sound check to see if the microphone is working.
10. Adjust the Master Volume or the microphone volume (Dial #2) to achieve the desired volume, (recommended setting is 5 or 6).