

Elks Picnic Shelter

BBQ Lighting Instructions:

Open Roll Up Door and turn on Gas Supply:

Use the main entrance key to open the roll up door. Wait for the door to open all the way to the top. (The Gas will not turn on if the door is not open to the top).

Go to the right side of the BBQ's to the red and yellow emergency stop button. Twist and pop the emergency button out. After a few seconds the Overhead fan and gas should turn on.





Starting the 2 Medium sized BBQs:

Turn far right knob to the warmest setting. Only needs a $\frac{1}{4}$ turn, up and down. Then turn on the Green Ignitor Switch on the right side. You will hear a clicking sound. All the burners should ignite after that. LEAVE THE SWITCH ON. The clicking will stop once the BBQ is up to temperature.

Turning off the Medium Sized BBQ:

Turn off the Ignitor Switch.



Starting the Cook Top Unit:

Each burner and the oven have their own knobs. To light each one individually, turn their knob to the igniting position. The knob will go in a little further than the other positions. Hold the knob in and push the little silver electric ignitor button until the pilot lights. After lit hold the knob in for 20 seconds or it stays lit and heats up. You should be able to let it out, then turn to set your level of heat. This unit has a lot of gas lines to prime when lighting. It at times can be hard to get going.

Turning off the Cook Top Unit:

Make sure all Burners and Oven Knob are in the off position, black dot in down/vertical position. Pilots will go out when you hit the Emergency Stop Button on the right side of the BBQ area.



Starting the Flat Top Griddle Unit:

Each section has a burner. Like the oven, they have their own knobs. To light each one individually, turn their knob to the igniting position. The knob will go in a little further than the other positions. Hold the knob in and push the little red electric ignitor button inside the cabinet of the unit. Once the section pilot lights, hold the knob in for 20 seconds or it stays lit and heats up. You should be able to let it out, then turn to set your level of heat. This unit has a lot of gas lines to prime when lighting. It at times can be hard to get going.

Turning off the Cook Top Unit:

Make sure all Burners and Oven Knob are in the off position, black dot in up/vertical position. Pilots will go out when you hit the Emergency Stop Button on the right side of the BBQ area.

Closing the BBQ Shelter:

Once you are done using the BBQ Shelter, **PLEASE ENSURE** you have hit the emergency stop on the right side of the shelter. This will turn off the gas, the lights, and hood fan.

Close the Roll Up Door and nothing further needs to be done.

In case of an Emergency!

There is an Emergency Stop Button in the shelter on the right side. **If pushed it will turn off** the natural gas, the lights, and hood fan.

To **Reset** simply twist and pull the red button out.